


sony m-2000 manual

2-1 Control Panels

1 Audio control section

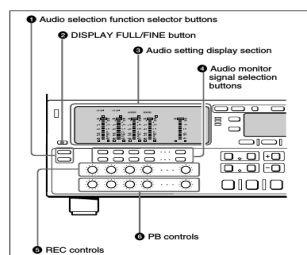

Audio selection function selector buttons
INPUT (input signal selection mode) button: Pressing this button puts the unit into input signal selection mode. In the audio setting display section, indicators flash to indicate the currently selected signal for each channel (HDS/SDI, SDTI, AES/EBU, or ANA). In this state, you can use the audio signal selection buttons to select the signal to input to each channel. Pressing this button again takes the unit out of input signal selection mode and puts it into monitor signal selection mode.

MIXING (mixing setting mode) button: Pressing this button puts the unit into mixing setting mode. In the audio setting display section, the MIX indicator flashes. In this state, you can use the audio signal selection buttons to specify which input channel signal will be recorded on which audio track on the tape. Pressing this button again takes the unit out of mixing setting mode and puts it into monitor signal selection mode.


For information about how to operate in input signal selection mode, mixing setting mode, and monitor signal selection mode, see the descriptions of the audio monitor signal selection buttons on page 2-5.

2-4 Chapter 2 Location and Function of Parts

2 DISPLAY FULL/FINE button

Pressing this button toggles the display mode of the level meters in the audio setting display section between FULL and FINE.
FULL: The display covers the range -60 dB to 0 dB or -40 dB to +20 dB as selected using setup menu item 806. In this mode the segment of the display corresponding to the current audio level and all lower segments light.
FINE: The display is enlarged, with a step of 0.25 dB. A segment indicating the reference level lights. In this mode only the segment of the display corresponding to the current audio level lights. If the audio level exceeds the maximum display level, the top segment flashes, and if the audio level goes below the minimum display level, the bottom segment flashes.

3 Audio setting display section

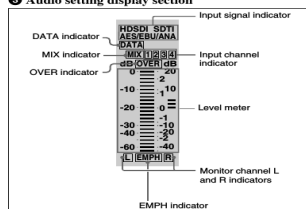

Input signal indicator: Indicates the currently selected input signal (HDS/SDI, SDTI, AES/EBU, or ANA for analog) for the corresponding audio input channel.
MIX (mixing) indicator: Flashes when a mixing setting operation is enabled for the corresponding audio track. The indicator showing the number of the selected input channel lights.

Voice recorders: analog micro cassette recorder/transcriber. Voice Recorder Sony MA Operating Instructions Manual. Voice recorders: micro cassette recorder/transcriber (16 pages).Items - View and Download Sony HDW-M operation manual online. HD Digital Video Cassette Recorder. HDW-M VCR pdf manual download.Sony M Manual,Sony M Instruction Manual,Sony M Operator Manual,Sony M Operating Instructions Manual,Sony M User Guide.The supplied CD-ROM includes operation manuals for the DVW series of The DVW-M/MP/P is a digital .. Contact your Sony.Sat, 18 Aug GMT repair manual sony m pdf - SONY service manuals repair schemes download pdf SONY service manuals.Share? background image. SERVICE MANUAL. US Model. Canadian Model. AEP Model. UK Model. Australian Model. M/ FS/80/HUBuy Sony M Microcassette Transcriber: Microcassette Recorders Sony M Microcassette Dictator and Transcriber out of 5 User Manual [pdf].We have the following Sony M manuals available for free PDF download. You may find documents other than just manuals as we also make available.Downloads. There are currently no manuals available to download for the M- If you have any documentation for this model, for example owners manual, .User Manual: Sony M Marketing Specifications (M).Sony FS Foot Control Pedal Unit for M M Dictation Transcriber Refurbished M Microcassette Transcriber w/Foot Control Ear Phon Manual.Find great deals on eBay for Sony M in Office Dictation Machines. Shop with Sony MA Microcassette Transcriber w/Foot Control Ear Phone Manual.Camera manuals and free digital camera pdf instructions. Find the user manual you need for your camera and more at ManualsOnline.We recently purchased a used Sony M microcassette transcriber which didn't have the instruction manual. We can't figure out how to.User manual for the device Sony MSW-M Online user manual database.Hi there, Save hours of searching online or wasting money on unnecessary repairs by talking to a 6YA Expert who can help you resolve this.DVW-M/MP. MSW HDW-M/MP .. If these manuals are required, please contact your local Sony Sales Office/Service. Center.[8ec] - Sony M Manual. Document Sony M Manual is available in various formats such as PDF, DOC and ePUB which you can directly download.a) The term M/E system refers to systems using either the M/E panel or the MFSC Operation Manual supplied with the MFS-.Ebook Repair Manual Sony M Microcassette Transcriber currently available at shalomsalonandspa.com for review only, if you need complete ebook.

[\[PDF\] closetmaid impressions 28.7 in corner unit](#)

[\[PDF\] sanyo dvw 6100](#)

[\[PDF\] vivicam s130 memory card](#)

[\[PDF\] whirlpool wdf530payw reviews](#)

[\[PDF\] pineapple express](#)

[\[PDF\] philips pd9012](#)

[\[PDF\] ar drone instructions](#)